

1911 Extractor Removal Tool Instructions

Before installing, UNLOAD PISTOL AND VERIFY CHAMBER IS EMPTY! Pull slide back, look into chamber, and make sure there is not a bullet in the chamber.



1. Remove slide assembly from frame assembly.
 2. Remove barrel, guide rod, spring, and spring plug from slide.
 3. Depress firing pin and slide down the firing pin stop.
 4. Remove firing pin from slide.
 5. Push the side of the Extractor Removal Tool that matches the specific caliber of the pistol into the breach face. This will spring the extractor hook to a position that allows it to slip past extractor hole.
- Note:** The Extractor Removal Tool has a side for 38 Super, 40 S&W, 9mm and a side for 45 ACP. The specific caliber engraving should be facing breach face.
6. Using the DP supplied screw driver, simply pry the extractor with screw driver tip inserted in the slot of extractor until extractor has passed the Extractor Removal Tool.
 7. Continue to pry extractor until able to grab and remove it with fingers.