

## Front Fiber Optic Installation


1. UNLOAD PISTOL and VERIFY CHAMBER is EMPTY! (pull slide back, LOOK INTO CHAMBER, and make sure there is not a bullet in the chamber.
2. Remove old optic by cutting it in two from the middle with a razor blade and pulling the pieces out both ends.



- 3a. INSTALL A PREFORMED INSERT. Feed the new insert into the sight from the rear to the front. Pull the bulbed end into the recess in the rear of the sight. The small end of the optic should be sticking out the front of the sight about 1/16". Trim if necessary



- 3b. INSTALL AN OPTIC LENGTH. Feed the Optic length through the sight. Carefully melt the optic at the serrated end into a bulb and pull the optic into the sight. The optic bulb should go into the sight, fitting snug and flush

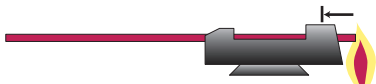

Trim the optic at the muzzle end of the sight 1/16" from the end of the sight itself. Hold a heat source (such as a cigar lighter) close to the front of the sight. Hold the heat source there until the end of the optic melts down into the sight and pulls itself into the cradle. Be careful not to burn the sight.

