


GP 6 Front Sight Installation

UNLOAD PISTOL AND VERIFY CHAMBER IS EMPTY! Pull slide back, look into chamber, and make sure there is not a bullet in the chamber.

1. Place slide in padded vise.



2. Use 1/16" punch to remove pin from front sight.

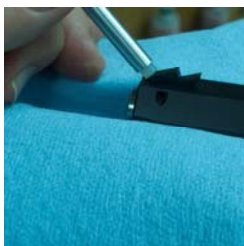

3. Tap out front sight with nylon tip punch (provided).
4. Put Loctite 620 Retaining Compound on the bottom of DP front sight.
5. Install DP front sight.



6. Re-install pin using a 1/16" punch. Make sure holes are aligned.