

INST. #10

Glock Front Sight Removal

1. UNLOAD PISTOL and VERIFY CHAMBER is EMPTY! (Pull slide back, LOOK INTO THE CHAMBER, and make sure there is not a bullet in the chamber).
2. Remove the slide from the frame, and work with just the slide. Clamp the slide in a padded vice.
3. Using a punch, push out the original front sight and thoroughly clean the sight well.

Glock Front Sight Installation

1. Follow instructions 1 and 2 above.
2. Put a drop of glue onto the internal threads of the front sight and onto the threads of the sight retaining screw.
Use only LOCTITE®271 glue or equivalent. NOTE: Follow LOCTITE®271 instructions.
3. Place the sight into the sight well in the slide.
4. Holding the sight in place with a finger, turn the slide upside down and, using the provided wrench, screw in the sight retaining screw. Align sight parallel to slide. After assembly, allow a minimum of 8 hours for thorough curing of the glue.