
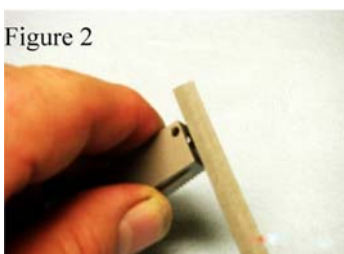


**Before checking the function of the grip safety, make sure the firearm is not loaded, no mag is inserted and the chamber is empty.**


Grip safety must function for the firearm to be safe. It must move at least 1/16" before it disengages.

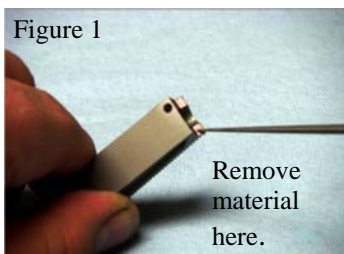

To increase engagement, remove material as shown in Figure 2.

See Figure 1 for exact place to remove material.

If grip safety doesn't move freely, remove material where shown in Figure 3.

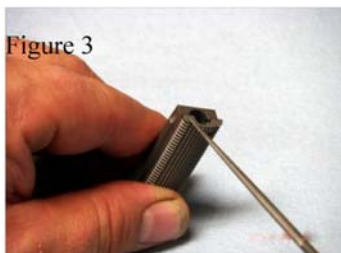

Note: Be sure to check trigger pull as different mainspring housings can affect pull weight.